

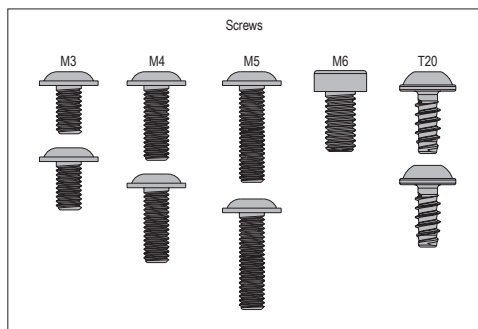
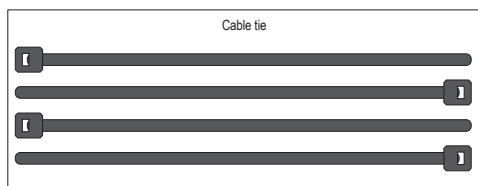
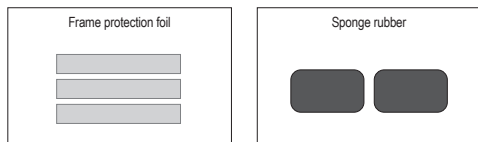


Parts

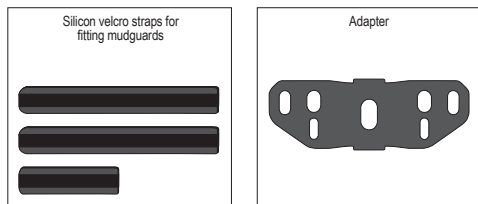


M3	M4	M5	M6	T20
FOX	ÖHLINS	ROCKSHOX	ROCKSHOX SUNTOUR	ADAPTER PLATTE/PLATE

Mounting preparation

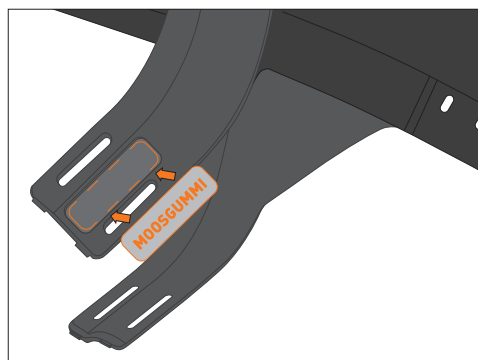


Adhere the foam rubber to the mudguard (outer part)

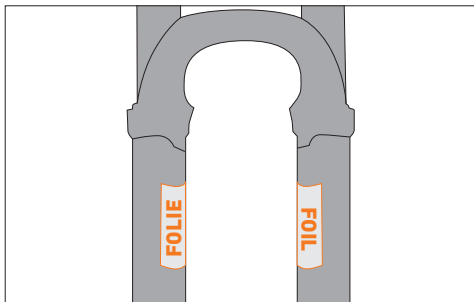


Apply the protective frame film to the down tube.


1. Fastening possibility by means of an adapter

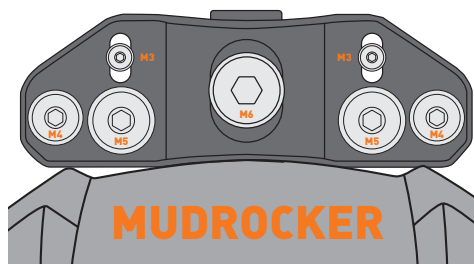

The MUDROCKER FRONT fork adapter has various options for attachment to the fork bridge. Please check in advance whether the existing bolt-on options match those on your fork. The adapter must be fixed at least with the central M6 screw or 2 off-center screws. The adapter can also be rotated 180 degrees. The minimum distance to the tyre, even at full travel, must be kept in mind.

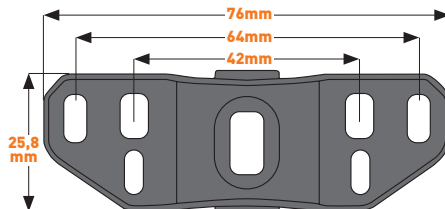

Alignment for Fox

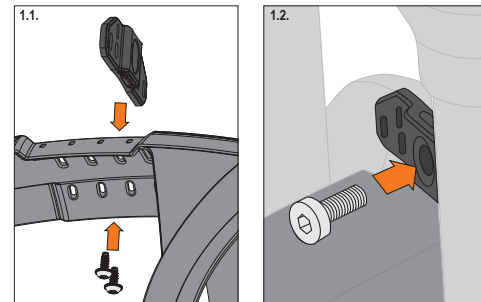


1.1. Screw the adapter onto the mudguard in keeping with the required hole pattern. Use the enclosed self-tapping screws for this. (TX20)


1.2. Screw the adapter onto the fork bridge

2. Fastening possibility

by means of a hook and loop fasteners or cable binders

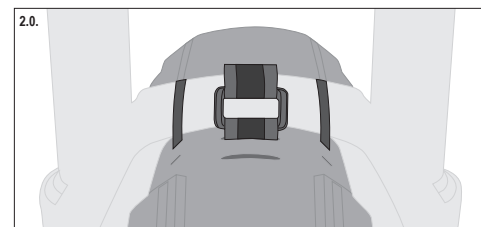

Mounting on the down tube

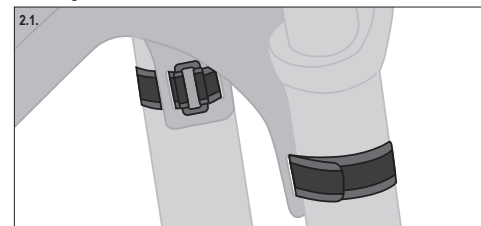

2.1. Thread a long strap through and pull it tight.